


CONNECTICUT WEATHERVANES

A touch of New England charm

ASSEMBLY INSTRUCTIONS FULL SIZE WEATHERVANES

COPPER SPACER BALL
(SMALL)

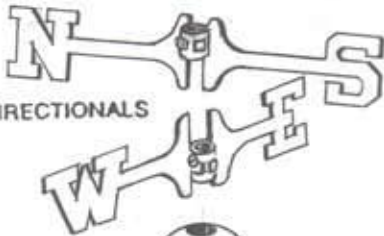


BRASS DIRECTIONALS

COPPER BALL (LARGE)



SMALL ROD

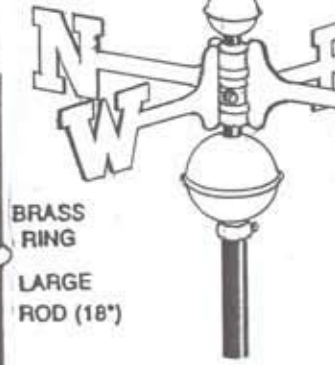

BRASS RING

LARGE ROD (18")

ASSEMBLED VIEW

YOUR PACKAGE
INCLUDES THE
FOLLOWING PIECES:

- 1 FIGURE
- 1 Small Copper Ball
- 1 Large Copper Ball
- 1 Set of Brass Directionals
- 1 Brass Ring
- 1 Small Steel Threaded Rod
- 1 Large Steel Rod (18")
- 1 Tube of Loctite®

1




POSITION
BRASS RING
OVER LARGE
ROD. TIGHTEN
SET SCREW

2



APPLY A LINE
OF LOCTITE® (supplied)
ACROSS THE THREADS.
(This small amount is
all that's needed)


THREAD SMALL ROD
INTO LARGE ROD.
POSITION WRENCHES
ON FLAT SPOTS.
TIGHTEN FIRMLY.

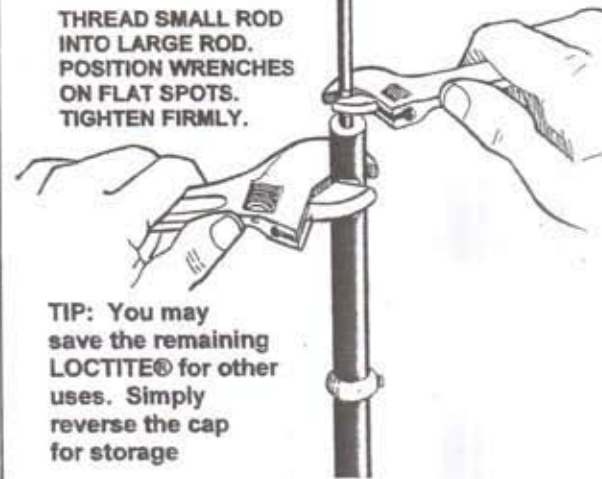

TIP: You may
save the remaining
LOCTITE® for other
uses. Simply
reverse the cap
for storage


3

SLIDE
LARGE
BALL
DOWN
ROD TO
BRASS
RING.

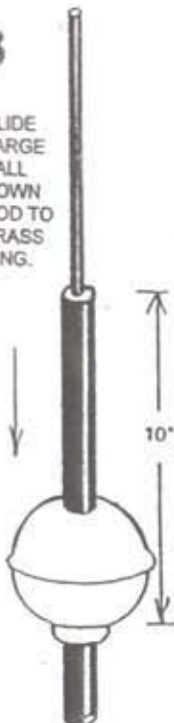

4


INTERLOCK
DIRECTIONALS.
SLIDE ONTO ROD.
TIGHTEN SET
SCREWS

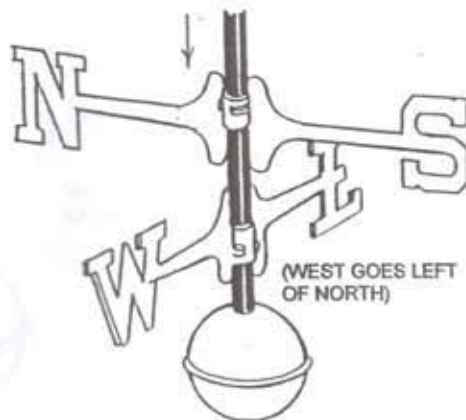

(WEST GOES LEFT
OF NORTH)

5

BRASS BOTTOM
OF WEATHERVANE
TUBE SLIDES
OVER SMALL
ROD.

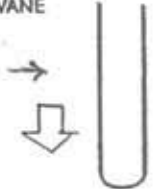

APPLY COMMON
GREASE TO ROD
SO VANE WILL
ROTATE FREELY.

FINAL STEP...
SLIDE WEATHERVANE
FIGURE ONTO
SMALL ROD...
ENJOY!

