

**ASSEMBLY INSTRUCTIONS - YARD AND GARDEN POLE
 COTTAGE SIZE WEATHERVANES**

WEATHERVANE ASSEMBLY




1. Position brass ring over rod.




2. Slide large ball down rod to brass ring.

3. Interlock directionals... slide on rod.

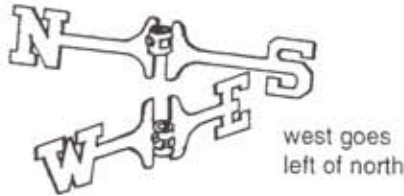

4. Slide small ball on rod...rest on directionals.

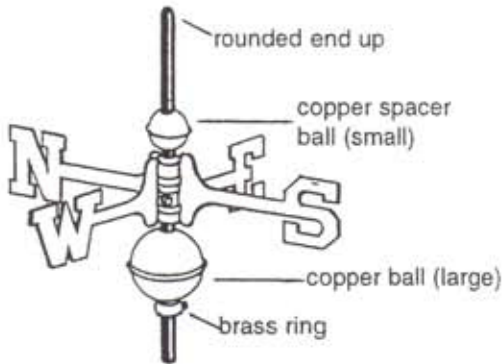

copper bottom of weathervane



5. Slide weathervane onto rod.

Slide weathervane and retaining hook* onto rod simultaneously.


copper bottom of weathervane



Tighten set screw.

retaining hook

*Retaining hook included with and required for 3-dimension figures only.

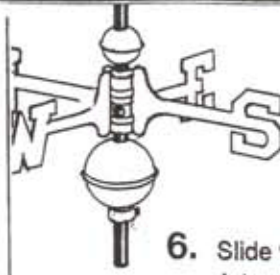

6. Slide weathervane rod into pole and lock using wing nut.

Section C

7. Thread section C into Section B. (See note →)

Section B

8. Thread* section B into section A for full 55' height. (See note →)


*Pliers may be required to tighten.

Section A

Press into ground for final installation.

YOUR PACKAGE INCLUDES

- 1 Weathervane Figure
- 1 Set of Brass Directionals
- 1 Weathervane Rod
- 1 Set of Copper Balls (one large, one small)
- 1 Retaining Hook (if required)
- 1 3-Piece Yard & Garden Pole

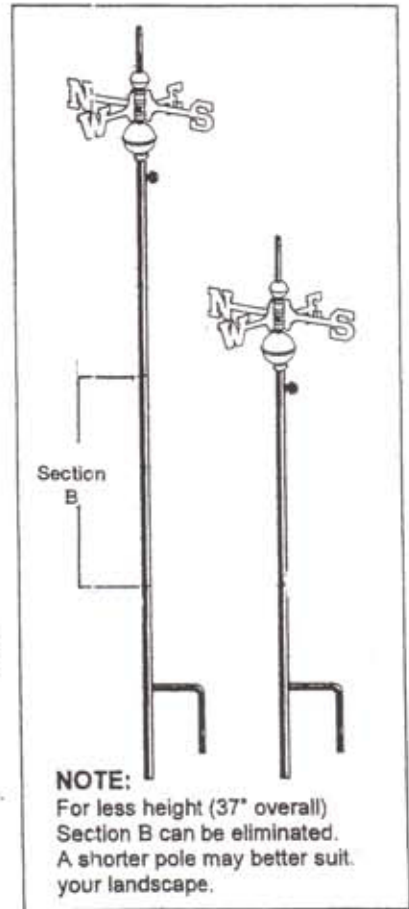

NOTE:
 For less height (37" overall) Section B can be eliminated. A shorter pole may better suit your landscape.